


# SHIMANO

## ANTARES S A-RB

## ANT-HGR

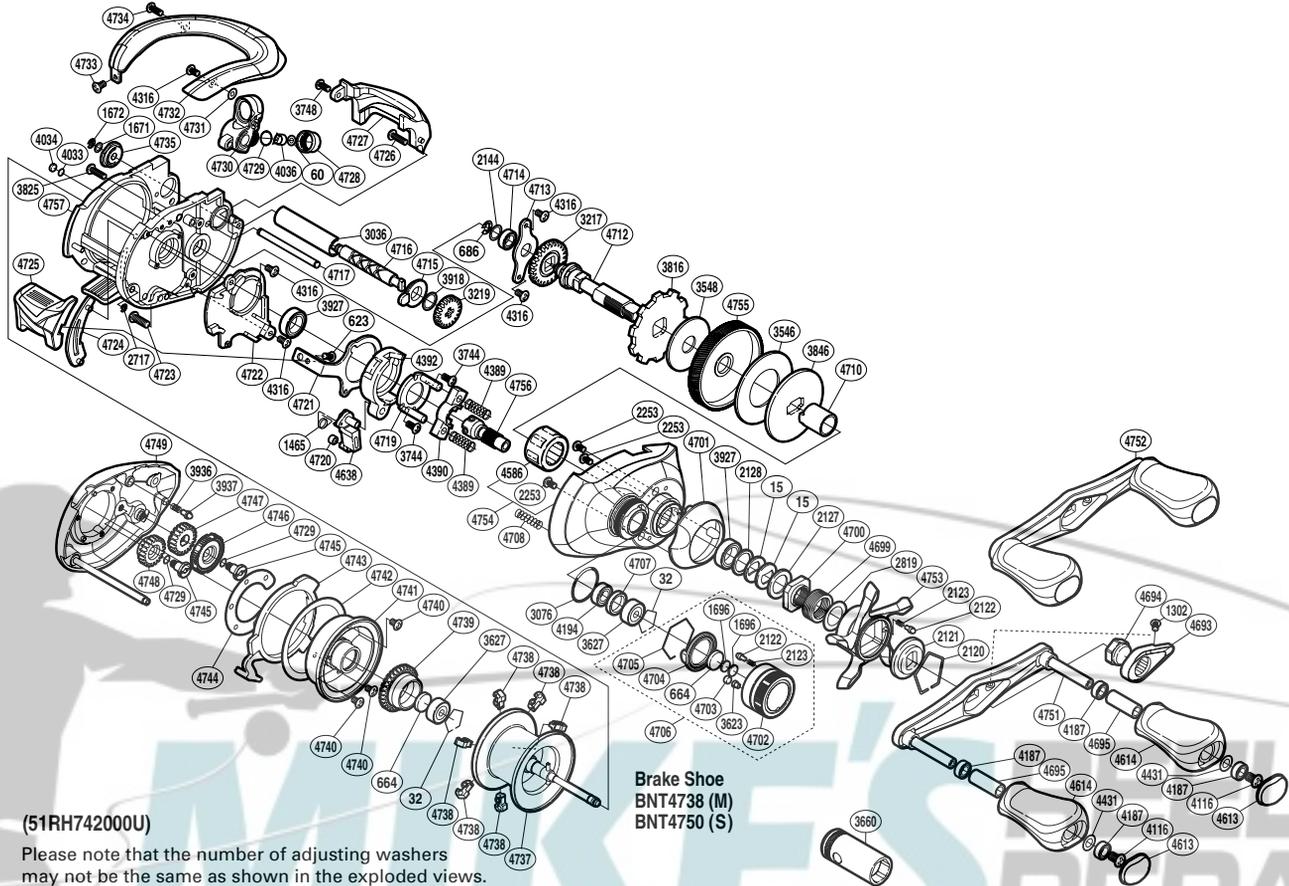

(51RH742000U)

Please note that the number of adjusting washers may not be the same as shown in the exploded views. (Adjustment will vary with each individual product.)

Part No.	Description	Part No.	Description	Part No.	Description
BNT0015	Drag Spring Washer	BNT4033	Washer	BNT4722	Clutch Guard
BNT0032	Bearing Retainer	BNT4034	Anti-Thrust Washer	BNT4723	Screw
BNT0060	Spacer	BNT4036	Line Guide Pawl	BNT4724	Clutch Bar Guide B
BNT0623	Screw	BNT4116	Screw	BNT4725	Quick-Fire II Clutch Bar
BNT0664	Spacer B	BNT4187	Ball Bearing	BNT4726	Screw
BNT0686	E Lock	BNT4194	Ball Bearing	BNT4727	Level Wind Protector
BNT1302	Screw	BNT4316	Screw	BNT4728	Pawl Cap
BNT1465	Clutch Pawl Spring	BNT4389	Yoke Spring	BNT4729	O Ring
BNT1671	Washer	BNT4390	Yoke	BNT4730	Line Guide
BNT1672	E Lock	BNT4392	Clutch Cam	BNT4731	Spacer
BNT1696	Cast Control Spacer	BNT4431	Washer	BNT4732	Thumb Rest
BNT2120	Click Plate Retainer	BNT4586	Roller Clutch Bearing	BNT4733	Screw
BNT2121	Star Drag Click	BNT4613	Handle Knob Seal	BNT4734	Screw
BNT2122	Click Pin	BNT4614	Handle Knob	BNT4735	Worm Bushing B
BNT2123	Click Spring	BNT4638	Clutch Pawl	BNT4737	Spool Assembly
BNT2127	Star Drag Spacer	BNT4693	Handle Nut Plate	BNT4738	Brake Shoe M
BNT2128	Bearing Washer	BNT4694	Handle Nut	BNT4739	Brake Ring Gear
BNT2144	Washer	BNT4695	Handle Knob Pipe	BNT4740	Screw
BNT2253	Screw	BNT4699	Star Drag Spring	BNT4741	Brake Case
BNT2717	E Lock	BNT4700	Star Drag Nut	BNT4742	Washer
BNT2819	Washer	BNT4701	Clutch Button Attachment	BNT4743	Side Plate Cam Lever
BNT3036	Level Wind Guard	BNT4702	Cast Control Cap	BNT4744	Brake Case Washer
BNT3076	O Ring	BNT4703	Retainer Sheet	BNT4745	Screw
BNT3217	Idle Gear	BNT4704	Cast Control Click Plate	BNT4746	BR Dial
BNT3219	Idle Gear	BNT4705	Cast Control Click Holder	BNT4747	BR Dial Gear
BNT3546	Drag Washer	BNT4706	Cast Control Cap Assembly	BNT4748	Idle Gear
BNT3548	Drag Washer	BNT4707	Bearing Spacer	BNT4749	Left Side Plate
BNT3623	Cast Control Cap Retainer	BNT4708	Damper Spring	BNT4751	Handle Shank Assembly
BNT3627	Ball Bearing	BNT4710	Roller Clutch Inner Tube	BNT4752	Handle Assembly
BNT3744	Screw	BNT4712	Drive Shaft	BNT4753	Star Drag
BNT3748	Screw	BNT4713	Drive Shaft Retainer	BNT4754	Right Side Plate
BNT3816	Anti-Reverse Ratchet	BNT4714	Ball Bearing	BNT4755	Drive Gear
BNT3825	Screw	BNT4715	Worm Bushing A	BNT4756	Pinion Gear
BNT3846	Key Washer	BNT4716	Worm Shaft	BNT4757	One-Piece Frame
BNT3918	Washer	BNT4717	Stabilizer Bar		
BNT3927	Ball Bearing	BNT4719	Clutch Cam Retainer	BNT3660	Reel Wrench (accessory)
BNT3936	Click Spring	BNT4720	Clutch Pawl Bushing	BNT4692	B-100 Oil (accessory)
BNT3937	Click Pin	BNT4721	Clutch Plate	BNT4750	Brake Shoe S (accessory)