


SHIMANO®

CALAIS®

CL-201-5

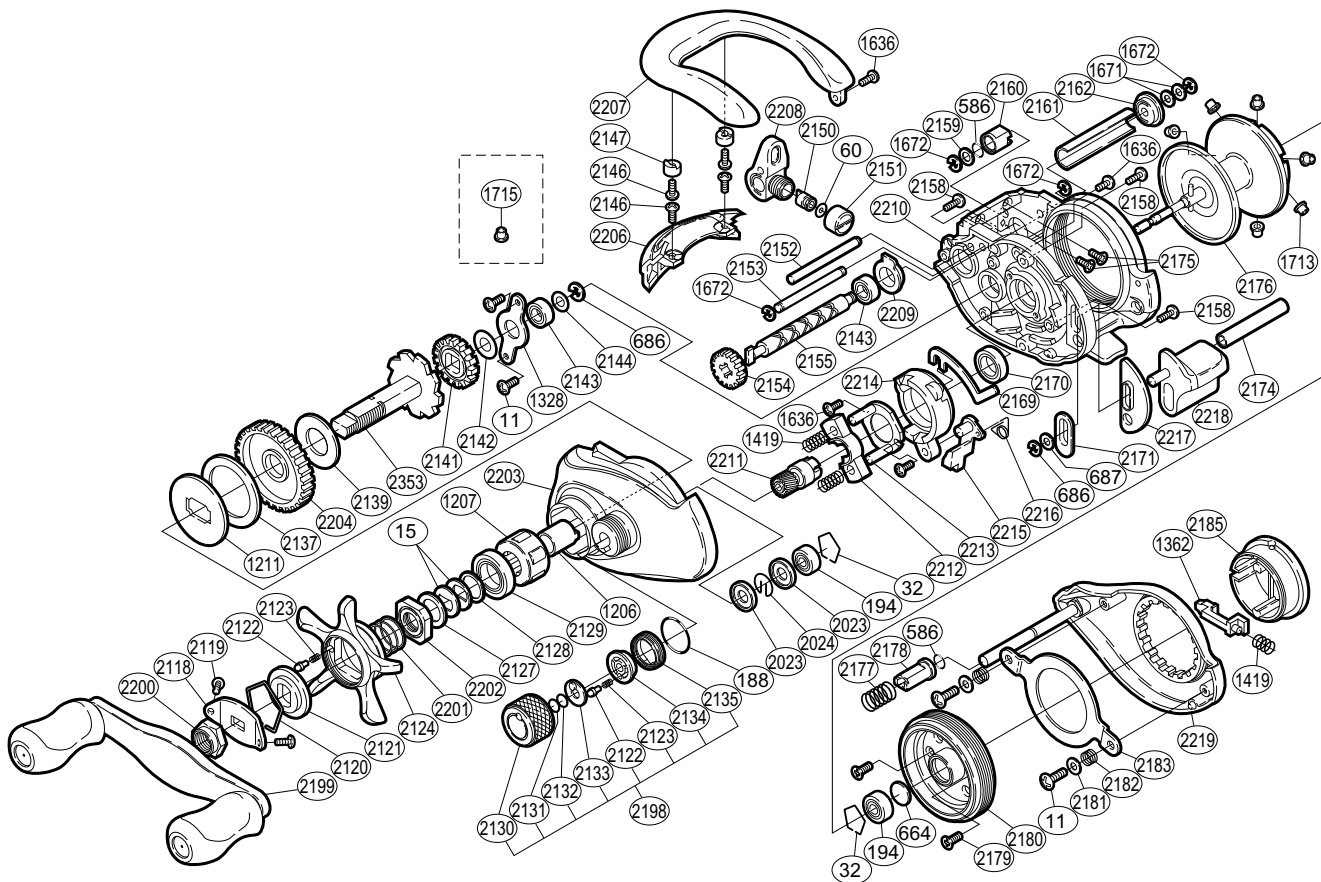

Part No.	Description	Part No.	Description	Part No.	Description
BNT0011	Multi-Purpose Screw (A)	BNT2130	Cast Control Cap	BNT2178	Damper (A)
BNT0015	Drag Spring Washer	BNT2131	Spool Tension Spacer (B)	BNT2179	Brake Case Screw
BNT0032	Bearing Retainer	BNT2132	Spool Tension Spacer (A)	BNT2180	Brake Case
BNT0060	Spacer (optional)	BNT2133	Cast Control Click Plate	BNT2181	Brake Case Ring Washer
BNT0188	iOi Ring	BNT2134	Click Pin Holder	BNT2182	Brake Case Ring Spring
BNT0194	Ball Bearing	BNT2135	Cast Control Click Holder	BNT2183	Brake Case Ring
BNT0586	Friction Ring	BNT2137	Drag Washer (C)	BNT2185	Turnkey Dial
BNT0664	Spacer (B)	BNT2139	Drag Washer (A)	BNT2198	Cast Control Cap Assembly
BNT0686	iEi Lock	BNT2141	Idle Gear (A)	BNT2199	Handle Assembly
BNT0687	Spacer	BNT2142	Idle Gear (A) Spacer	BNT2200	Handle Nut
BNT1206	Roller Clutch Inner Tube	BNT2143	Ball Bearing	BNT2201	Star Drag Spring
BNT1207	Roller Clutch Bearing	BNT2144	Drive Shaft Washer	BNT2202	Star Drag Nut
BNT1211	Key Washer	BNT2146	Line Guard Screw	BNT2203	Left Side Plate
BNT1328	Drive Shaft Retainer	BNT2147	Line Guard Screw Cover	BNT2204	Drive Gear
BNT1362	Turnkey Pawl	BNT2150	Line Guide Pawl	BNT2206	Level Wind Protector
BNT1419	Yoke Spring	BNT2151	Pawl Cap	BNT2207	Thumb Rest
BNT1636	Multi-Purpose Screw (B)	BNT2152	Level Wind Guide	BNT2208	Line Guide
BNT1671	Worm Shaft Washer	BNT2153	Line Guard (C)	BNT2209	Worm Bushing (A)
BNT1672	iEi Lock	BNT2154	Idle Gear (C)	BNT2210	One-Piece Frame
BNT1713	Brake Collar (green)	BNT2155	Worm Shaft	BNT2211	Pinion Gear
BNT2023	Spool Shaft Clip Holder	BNT2158	Left Side Plate Screw	BNT2212	Yoke
BNT2024	Spool Shaft Clip	BNT2159	Damper Washer	BNT2213	Clutch Cam Retainer
BNT2118	Handle Nut Plate	BNT2160	Damper (B)	BNT2214	Clutch Cam
BNT2119	Nut Plate Screw	BNT2161	Level Wind Guard	BNT2215	Clutch Pawl
BNT2120	Click Plate Retainer	BNT2162	Worm Bushing (B)	BNT2216	Clutch Pawl Spring
BNT2121	Star Drag Click Plate	BNT2169	Clutch Plate	BNT2217	Clutch Bar Guide (B)
BNT2122	Click Pin	BNT2170	Ball Bearing	BNT2218	Quick-Fire II Clutch Bar
BNT2123	Click Spring	BNT2171	Clutch Bar Guide (A)	BNT2219	Right Side Plate
BNT2124	Star Drag	BNT2174	Clutch Bar Support	BNT2353	Drive Shaft
BNT2127	Star Drag Spacer	BNT2175	Thumb Rest Screw		
BNT2128	Bearing Washer	BNT2176	Spool Assembly		
BNT2129	Star Drag Bearing	BNT2177	Right Side Plate Spring	BNT1715	Brake Collar (red)