



# SYMETRE 4000RH 01

RD No.	PARTS NAMES	RD No.	PARTS NAMES	RD No.	PARTS NAMES
0026	Ball Bearing	5222	Idle Gear Lock	6330	Line Roller Bushing
0041	Drive Gear Washer	5253	Oscillating Guide	6331	Line Roller Spacer
0050	Anti-Reverse Lever Screw	5255	Worm Shaft	6332	Line Roller Washer
0071	Rotor Nut	5256	Idle Gear	6353	Bail Spring Guide (A)
0589	Lever Hold Spring	5257	Oscillating Guide Retainer	6354	Bail Spring
0806	Bail Hold Support Screw	5258	Anti-Reverse Lever	6355	Bail Spring Guide (B)
0930	Ball Bearing	5261	Slider Retainer Screw	6358	Rotor Protector
1008	Handle Lock Washer	5262	Oscillating Slider Retainer	6359	Bail Trip Lever
1506	Clutch Cover Screw	5263	Oscillating Slider	6482	Protector Screw (large)
1520	Anti-Reverse Cam Spring	5264	Eared Washer OB rO	6483	Bail Hold Support Spacer
2094	Spacer	5266	Drag Washer OHÓ (cloth)	6499	Side Cover Screw (small)
2298	Spacer	5269	Drag Washer OHÓ (blue)	6517	Bail Assembly
2346	Drag Washer OCÓ (cloth)	5270	Eared Washer OBÓ	6525	Drive Gear
2347	Click Gear	5275	Hold Click Spring	6529	Side Cover Screw (medium)
2348	Drag Washer OCÓ (blue)	5276	Lever Click Gear	6581	Bail Spring Cover
2409	Worm Shaft Spacer	5277	FightinÓ Pressure Screw Washer	6582	Rotor
2852	Handle Screw Lock	5278	FightinÓ Pressure Screw	6674	Bail Arm
3081	Side Cover Screw (long)	5310	Bushing	6894	Oscillating Slider Bushing
3282	Roller Clutch Screw	5338	Drag Washer OCÓ (cloth)	6919	Roller Clutch Assembly
3306	Ball Bearing	5339	Drag Shaft (B)	6920	Spacer
3309	Line Roller Screw	5340	Key Washer OAÓ	6922	Worm Bushing
3402	Protector Screw (small)	5341	Drag Coil Spring	6924	Anti-Reverse Cam
3436	Drag Programmer Screw	5342	Drag Spring Washer	6927	Rear Cover Screw (long)
4150	Rear Cover Screw (short)	5343	Pressure Screw	6932	Drag Shaft (A)
4421	Handle Screw Cap	5344	Hold Click Spring Washer	6937	Main Shaft
4460	Handle Assembly	5880	Nut Lock Screw	6979	Spool Assembly (aluminum)
4652	Lever Spring Guide (B)	6077	Click Pin	6980	Spool Assembly (graphite)
4653	Lever Spring	6085	Line Roller	6982	Side Cover Assembly
4654	Lever Spring Guide (A)	6132	Friction Ring	6983	Body
4656	Trip Lever Spacer	6290	Rotor Nut Lock Plate	6984	Rear Cover
4678	Oscillating Pawl	6296	Click Spring	6985	FightinÓ Drag II Lever
4749	Bail Arm Screw	6307	Bail Hold Support Shaft	6986	Drag Programmer
4838	Drive Gear Bushing	6329	Bearing Spacer	7287	Pinion Gear