



(1RJ200012U)

| Part No. | Description               | Part No. | Description                | Part No. | Description                    |
|----------|---------------------------|----------|----------------------------|----------|--------------------------------|
| TT 0002A | Handle Bolt Plate         | TT 0570  | Ball Bearing               | TT 0618  | Cross Bar Stop                 |
| TT 0040A | Pre-Load Spring           | TT 0575  | Ball Bearing               | TT 0619  | Lever Shaft Body Washer        |
| TT 0042A | Bearing Thrust Washer     | TT 0582  | Push "Low" Button Shaft    | TT 0621  | Pre-Program Key Pin            |
| TT 0069  | "E" Lock                  | TT 0584  | Cover Screw                | TT 0622  | Pre-Program Key                |
| TT 0091  | Push Button Shield        | TT 0585  | Pre-Program Dial           | TT 0623  | Pre-Program Screw              |
| TT 0092  | Handle Bolt Plate Screw   | TT 0586  | Lever Hub Cover            | TT 0624  | Pinion Gear (B)                |
| TT 0093  | Slide Plate Spring        | TT 0587  | Drag Control Button        | TT 0626  | Cross Pin (B)                  |
| TT 0094  | Slide Plate               | TT 0588  | Drag Control Button Spring | TT 0627  | Alert Ratchet Screw            |
| TT 0107  | Drive Shaft Spring "B"    | TT 0589  | Drag Control Lever         | TT 0628  | Alert Ratchet                  |
| TT 0148  | Handle Bolt               | TT 0590  | Lever Click Shoe           | TT 0632  | Drag Washer Screw              |
| TT 0206  | Friction Washer (C)       | TT 0591  | Lever Click                | TT 0634  | Pressure Plate Spring          |
| TT 0209  | Gear Select Cross Bar     | TT 0592  | "E" Lock                   | TT 0641  | Cooling Shield Screw           |
| TT 0211  | Drive Shaft Spring        | TT 0593  | Lever Click Cover          | TT 0642  | Bearing Spacer                 |
| TT 0212  | Friction Washer (A)       | TT 0594  | Lever Click Cover Screw    | TT 0644  | Left Side Plate                |
| TT 0213  | Drive Shaft Screw         | TT 0595  | Lever Thrust Ring (A)      | TT 0645  | Left Side Plate Screw          |
| TT 0343  | Push Button Shield Screw  | TT 0596  | Quadrant Anchor Bolt       | TT 0650  | Handle Assembly                |
| TT 0474  | Drive Shaft Shield        | TT 0597  | Lever Quadrant             | TT 0651  | Lever Shaft Body               |
| TT 0475  | Drive Shaft Thrust Washer | TT 0598  | Lever Quadrant Bushing     | TT 0652  | Pinion Shaft                   |
| TT 0478  | Friction Shoe Spring      | TT 0599  | Right Side Plate (B)       | TT 0653  | Spool                          |
| TT 0479  | Dial Click Shoe           | TT 0600  | Drive Shaft Holder Screw   | TT 0654  | Drag Plate Screw               |
| TT 0480  | Dial Click                | TT 0601  | Right Side Plate Screw     | TT 0655  | Drag Plate                     |
| TT 0483  | Dial Washer               | TT 0602  | Cross Pin Support Spring   | TT 0656  | Drag Washer                    |
| TT 0484  | "E" Lock                  | TT 0603  | Plunger Cross Pin (B)      | TT 0657  | Pressure Plate                 |
| TT 0485  | Lever Thrust Ring (B)     | TT 0604  | Plunger Cross Pin Support  | TT 0658  | "O" Ring (A)                   |
| TT 0512  | Cross Pin (A)             | TT 0606  | Free Spool Detent          | TT 0659  | Cooling Shield                 |
| TT 0524  | Waterproof Ring           | TT 0607  | Pressure Spring            | TT 0660  | One-Piece Frame                |
| TT 0528  | Stand Screw               | TT 0608  | Detent Bushing             | TT 0663  | Bearing Spacer                 |
| TT 0529  | Anti-Reverse Ratchet      | TT 0609  | Right Side Plate (B) Screw | TT 0664  | Harness Lug Screw              |
| TT 0531  | Set Plate Screw           | TT 0610  | Plunger Holder Screw       | TT 0665  | Harness Lug                    |
| TT 0532  | Set Plate                 | TT 0611  | Plunger Holder             | TT 0767  | Right Side Plate (A)           |
| TT 0533  | Dog Spring                | TT 0612  | Plunger Spring             |          |                                |
| TT 0534  | Dog                       | TT 0613  | Alert Plunger              | TT 0646  | Rod Clamp Bolt (accessory)     |
| TT 0555  | Stand Washer              | TT 0615  | Drive Gear (A)             | TT 0647  | Rod Clamp (accessory)          |
| TT 0556  | Stand                     | TT 0616  | Drive Gear (B)             | TT 0648  | Rod Clamp Nut (A) (accessory)  |
| TT 0567  | Bearing Thrust Washer (B) | TT 0617  | Drive Shaft                | TT 0649  | Rod Clamp Bolt (S) (accessory) |