



### TLD-2SPEED 20 96

TT No.	PARTS NAMES	TT No.	PARTS NAMES	TT No.	PARTS NAMES
0002A	Handle Bolt Plate	0172	Pre-Load Spring A	0212	Friction Washer (A)
0013	ÓCÓ Lock	0174	Seal Lock	0213	Drive Shaft Screw
0040A	Pre-Load Spring B	0176	Pressure Release Spring	0216	Click Button Washer
0042A	Bearing Thrust Washer	0178	Main Shaft	0217	Click Button
0069	ÓCÓ Lock	0179	ÓCÓ Lock	0228	Pressure Spring (C)
0090	Push Button Shield Screw	0183	Click Gear	0229	Cross Pin
0091	Push Button Shield	0184	Click Gear Screw	0236	Lever Quadrant
0092	Handle Bolt Plate Screw	0185	Click Pawl	0237	Side Plate
0093	Slide Plate Spring	0186	Click Pawl Washer	0238	Spool
0094	Slide Plate	0187	Click Spring Screw	0239	Cross Bar
0107	Drive Shaft Spring ÓBÓ	0188	Click Spring	0240	One Piece Frame
0147	Push ÓLowÓ Button Shaft	0189	Cross Bar Bolt (A)	0245	Drag Plate
0148	Handle Bolt	0190	Line Guard	0246	Drag Washer
0150	Drive Shaft Shield	0192	Harness Lug	0338	Dog
0151	Pre-Program Dial	0193	Cross Bar Bolt (B)	0340	Guard Against Dog
0152	Dial Spring	0194	Lever Click Spring	0341	Dog Spring Guide
0153	Body ÓOÓ Seal	0195	Click Spring Screw	0342	Dog Spring
0154	Lever Shaft Body	0196	Lever Thrust Washer	0406	Side Plate Screw (B)
0155	Drag Control Lever (# 30)	0199	Free Spool Detent	0471	Handle Assembly
0156	Friction Shoe Spring	0201	Pinion Gear (A)	0569	Ball Bearing
0157	Friction Shoe	0202	Pinion Gear (B)	0570	Ball Bearing
0158	Quadrant Anchor Bolt	0203	Pinion Guard	0571	Ball Bearing
0159	Bolt Shield	0205	Drive Gear (A)		
0161	Quadrant / Line Guard Screw	0206	Friction Washer (C)		
0162	Strike Stop	0207	Drive Gear (B)	0146	Wrench
0163	Pressure Spring (B)	0208	Drive Shaft	0224	Rod Clamp Bolt
0164	Side Plate Screw (A)	0209	Gear Select Cross Bar	0225	Rod Clamp Nut (B)
0167	Guard Screw	0210	Cross Bar Stop	0226	Rod Clamp
0171	Cooling Shield	0211	Drive Shaft Spring	0227	Rod Clamp Nut (A)