



TLD-2SPEED 30 96

TT No.	PARTS NAMES	TT No.	PARTS NAMES	TT No.	PARTS NAMES
0002A	Handle Bolt Plate	0174	Seal Lock	0217	Click Button
0013	ÖCÓ Lock	0176	Pressure Release Spring	0218	Main Shaft
0040A	Pre-Load Spring B	0179	ÖCÓ Lock	0220	Line Guard
0042A	Bearing Thrust Washer	0183	Click Gear	0228	Pressure Spring (C)
0069	ÖCÓ Lock	0184	Click Gear Screw	0229	Cross Pin
0090	Push Button Shield Screw	0185	Click Pawl	0236	Lever Quadrant
0091	Push Button Shield	0186	Click Pawl Washer	0237	Side Plate
0092	Handle Bolt Plate Screw	0187	Click Spring Screw	0241	Drag Control Lever (# 50)
0093	Slide Plate Spring	0188	Click Spring	0242	Spool
0094	Slide Plate	0189	Cross Bar Bolt (A)	0243	Cross Bar
0107	Drive Shaft Spring ÖBÖ	0192	Harness Lug	0244	One Piece Frame
0147	Push ÖLowÖ Button Shaft	0193	Cross Bar Bolt (B)	0245	Drag Plate
0148	Handle Bolt	0194	Lever Click Spring	0246	Drag Washer
0150	Drive Shaft Shield	0195	Click Spring Screw	0338	Dog
0151	Pre-Program Dial	0196	Lever Thrust Washer	0340	Guard Against Dog
0152	Dial Spring	0199	Free Spool Detent	0341	Dog Spring Guide
0153	Body ÖÖÖ Seal	0201	Pinion Gear (A)	0342	Dog Spring
0154	Lever Shaft Body	0202	Pinion Gear (B)	0406	Side Plate Screw (B)
0156	Friction Shoe Spring	0203	Pinion Guard	0471	Handle Assembly
0157	Friction Shoe	0205	Drive Gear (A)	0569	Ball Bearing
0158	Quadrant Anchor Bolt	0206	Friction Washer (C)	0570	Ball Bearing
0159	Bolt Shield	0207	Drive Gear (B)	0571	Ball Bearing
0161	Quadrant / Line Guard Screw	0208	Drive Shaft		
0162	Strike Stop	0209	Gear Select Cross Bar		
0163	Pressure Spring (B)	0210	Cross Bar Stop	0146	Wrench
0164	Side Plate Screw (A)	0211	Drive Shaft Spring	0224	Rod Clamp Bolt
0167	Guard Screw	0212	Friction Washer (A)	0225	Rod Clamp Nut (B)
0171	Cooling Shield	0213	Drive Shaft Screw	0226	Rod Clamp
0172	Pre-Load Spring A	0216	Click Button Washer	0227	Rod Clamp Nut (A)