



### TR - 2000LD 97

TLD No.	PARTS NAMES	TLD No.	PARTS NAMES	TLD No.	PARTS NAMES
0001	Handle Lock Screw	0056	Click Spring Screw	0142	Line Guide Pawl
0002	Handle Lock	0060	Pre-Load Spring A	0144	Level Wind Guide
0003	Handle Nut	0072	Pre-Load Washer A	0148	Click Spring
0005	Gear Shaft Shield	0082	Dial Spring	0149	Lock Washer
0006	Gear Shaft Thrust Washer	0084	Lever Thrust Ring	0150	Idle Gear
0008	Main Gear	0115	Pre-Program Dial	0151	Left Side Plate
0010	Body OOO Seal	0116	Lever Shaft Body	0153	Spool
0014	Click Spring Screw	0117	Drag Control Lever	0154	Main Shaft
0016	Strike Stop	0119	Lever Click Spring	0155	Frame
0017	Pressure Spring	0120	Free Spool Detent	0156	Level Wind Guard
0018	"C" Lock	0121	Lever Quadrant	0157	Stabilizer Bar
0019	Quadrant Anchor Bolt	0122	Side Plate Bolt	0158	Worm Shaft
0020	Bolt Shield	0123	Ball Bearing	0159	Friction Shoe
0021	Quadrant Screw	0123A	Ball Bearing	0160	Friction Shoe Spring
0025	Dog Spring	0126	Pinion Guard	0161	Thrust Washer
0026	Dog	0128	Drag Plate	0162	Line Guide
0027	Dog Spring Retainer	0129	Titanium Drag Washer	0163	Worm Shaft Spacer
0029	Pinion Gear	0132	"C" Lock	0188	Right Side Plate
0031	Seal Lock	0133	Pre-Load Body	0189	Cooling Shield
0035	Ball Bearing	0134	Click Gear	0190	Brake Collar
0037	Pressure Release Spring	0135	Click Gear Screw	0207	Handle
0039	"C" Lock	0137	Worm Shaft Retainer	0209	Click Pawl
0043	Pre-Load Washer B	0138	Worm Shaft Holder Washer	0210	Click Pawl Washer
0044	Pre-Load Spring B	0139	Worm Bearing	0211	Click Button
0050	Cross Pin B	0140	Line Guide Cover		
0053	Click Button Washer A	0141	Pawl Cap		