


# SHIMANO

# TIAGRA

TI-30A

⊙A-RB

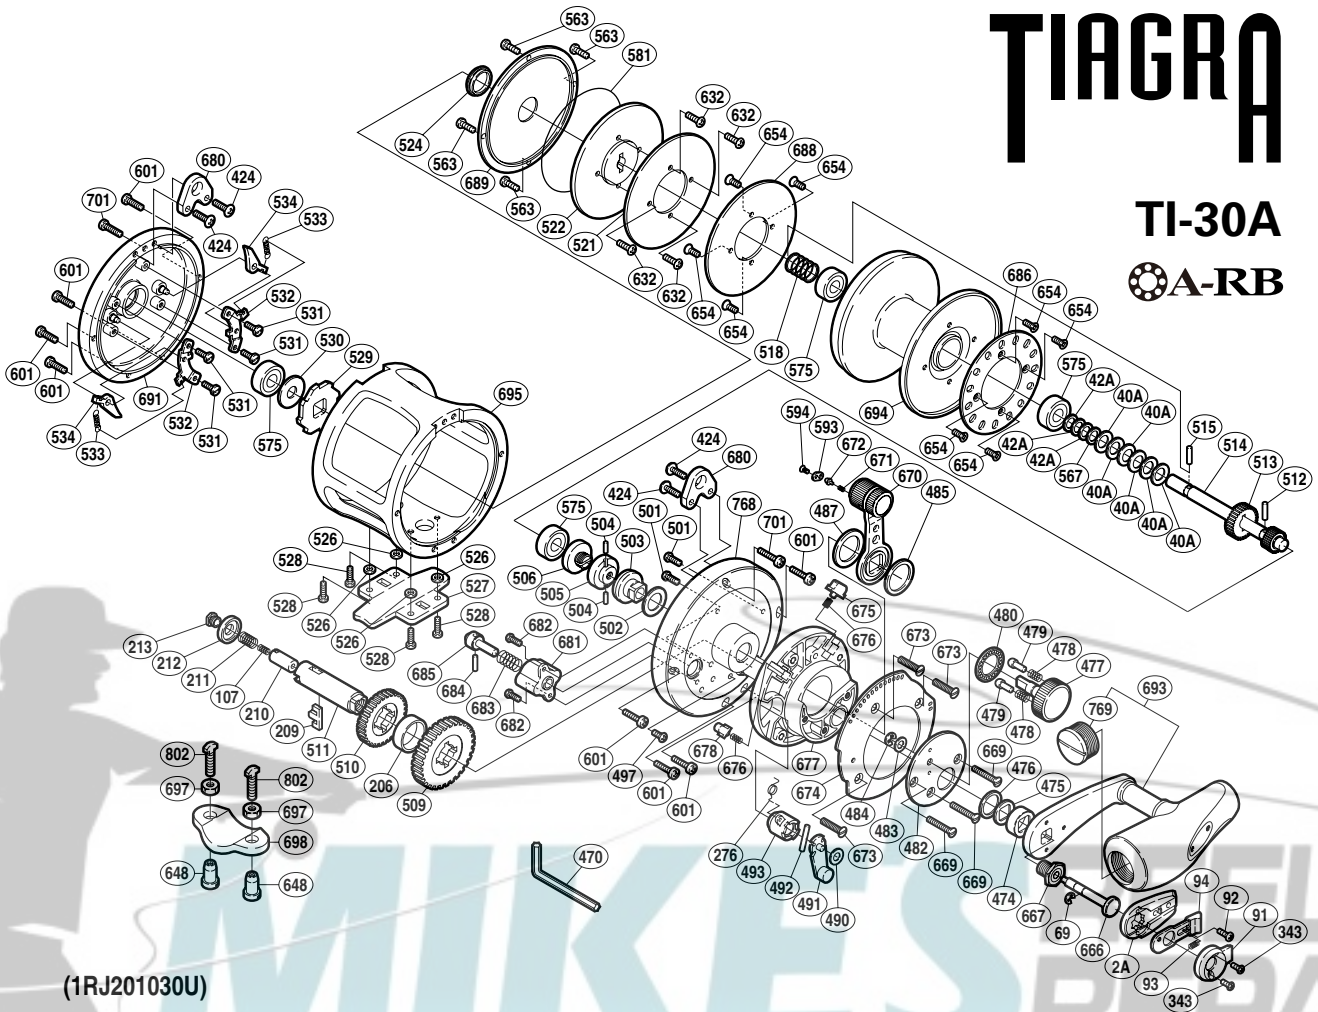

(1RJ201030U)

Part No.	Description	Part No.	Description	Part No.	Description
TT 0002A	Handle Bolt Plate	TT 0501	Screw	TT 0666	Push Low Button Shaft
TT 0040A	Pre-Load Spring	TT 0502	Washer	TT 0667	Handle Bolt
TT 0042A	Bearing Thrust Washer	TT 0503	Lever Shaft Body	TT 0669	Screw
TT 0069	E Lock	TT 0504	Pre-Program Key Pin	TT 0670	Drag Control Lever
TT 0091	Push Button Shield	TT 0505	Pre-Program Key	TT 0671	Lever Click Shoe
TT 0092	Screw	TT 0506	Pre-Program Screw	TT 0672	Liver Click
TT 0093	Slide Plate Spring	TT 0509	Drive Gear A	TT 0673	Screw
TT 0094	Slide Plate	TT 0510	Drive Gear B	TT 0674	Lever Quadrant
TT 0107	Drive Shaft Spring B	TT 0511	Drive Shaft	TT 0675	Strike Stop
TT 0206	Friction Washer C	TT 0512	Cross Pin A	TT 0676	Pressure Spring
TT 0209	Gear Select Cross Bar	TT 0513	Pinion Gear B	TT 0677	Right Side Plate B
TT 0210	Cross Bar Stop	TT 0514	Pinion Shaft	TT 0678	Free Spool Detent
TT 0211	Drive Shaft Spring	TT 0515	Cross Pin B	TT 0680	Harness Lug
TT 0212	Friction Washer A	TT 0518	Pressure Plate Spring	TT 0681	Plunger Holder
TT 0213	Drive Shaft Screw	TT 0521	Drag Washer	TT 0682	Screw
TT 0276	Cross Pin Support Spring	TT 0522	Pressure Plate	TT 0683	Click Spring
TT 0343	Screw	TT 0524	Waterproof Ring	TT 0684	Plunger Cross Pin A
TT 0424	Screw	TT 0526	Stand Washer	TT 0685	Alert Plunger
TT 0474	Drive Shaft Shield	TT 0527	Stand	TT 0686	Alert Ratchet
TT 0475	Drive Shaft Thrust Washer	TT 0528	Screw	TT 0688	Drag Plate
TT 0476	Bearing Spacer	TT 0529	Anti-Reverse Ratchet	TT 0689	Cooling Shield
TT 0477	Pre-Program Dial	TT 0530	Bearing Spacer	TT 0691	Left Side Plate
TT 0478	Friction Shoe Spring	TT 0531	Screw	TT 0693	Handle Assembly
TT 0479	Dial Click Shoe	TT 0532	Set Plate	TT 0694	Spool
TT 0480	Dial Click	TT 0533	Dog Spring	TT 0695	One-Piece Frame
TT 0482	Lever Hub Cover	TT 0534	Dog	TT 0701	Screw
TT 0483	Washer	TT 0563	Screw	TT 0768	Right Side Plate A
TT 0484	E Lock	TT 0567	Bearing Thrust Washer	TT 0769	Handle Knob Bushing
TT 0485	Lever Thrust Ring	TT 0575	Ball Bearing		
TT 0487	Lever Thrust Ring	TT 0581	O Ring	TT 0648	Rod Clamp Nut A (accessory)
TT 0490	Spacer	TT 0593	Lever Click Cover	TT 0697	Rod Clamp Nut B (accessory)
TT 0491	Strike Alert Lever	TT 0594	Screw	TT 0698	Rod Clamp (accessory)
TT 0492	Plunger Cross Pin B	TT 0601	Screw	TT 0802	Rod Clamp Bolt (accessory)
TT 0493	Plunger Cross Pin Support	TT 0632	Screw		
TT 0497	Screw	TT 0654	Screw	TT 0470	Wrench (accessory)

(190620)