


Please order by parts number, not key number
Veuillez indiquer le numéro de la pièce (Non "Key" No.)



CONVENTIONAL REEL

SALTIST LW20HA·LW30HA

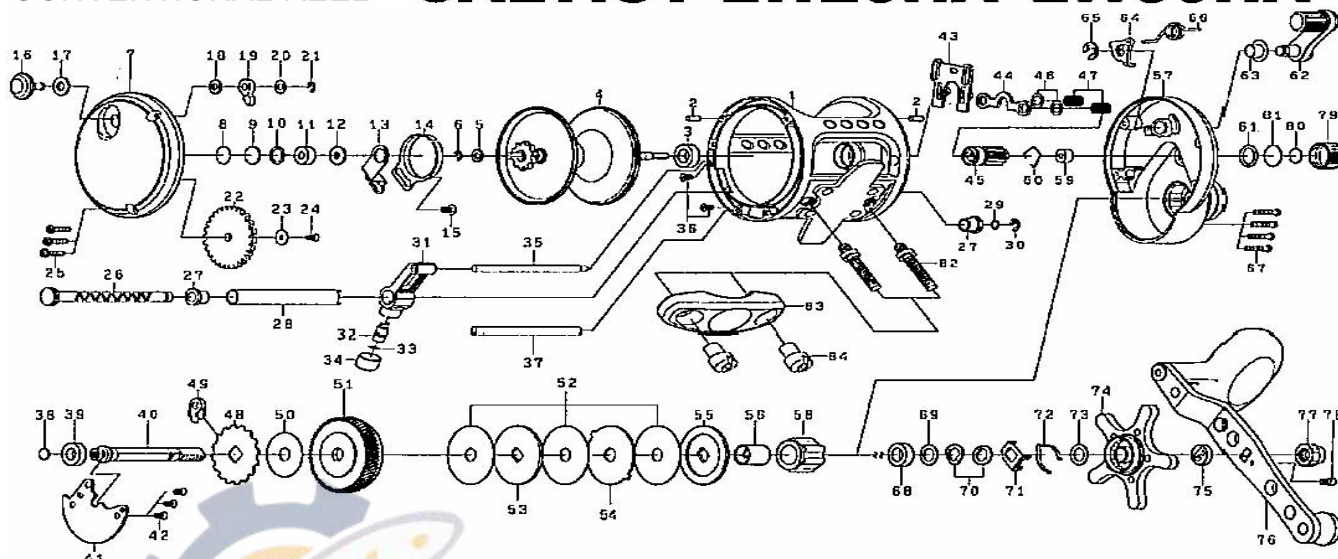

Key No.	Parts No.	Parts Name	Key No.	Parts No.	Parts Name
1	E63-4701	Frame assembly	48	E63-8201	Anti-reverse ratchet
2	G21-1701	Pin	49	E48-9001	Anti-reverse pawl
3	G42-7201	Ball bearing (A)	50	E62-5101	Drive shaft washer (B)
4	E63-4901	Spool assembly	51	E62-2901	Drive gear
5	E62-8201	Spool gear	52	E62-3002	Drag washer
6	320-1402	Spool gear retainer	53	E62-3101	Key washer (A)
7	E63-5101	Left side plate	54	E62-3201	Eared washer
8	G27-6300	Bearing washer (A)	55	E62-7301	Key washer (B)
9	G21-2401	Bearing washer (B)	56	E61-0701	Collar
10	F95-6702	Bearing washer (C)	57	E63-6401	Right side plate
11	G42-7701	Ball bearing (B)	58	E63-3301	Handle metal
12	E61-0501	Bearing washer (D)	59	E60-8801	Bushing
13	E63-5201	Click spring retainer	60	F03-2201	Bushing retainer
14	E62-4601	Click spring	61	B05-5201	"O" ring
15	351-7701	Click spring screw	62	E62-3601	Clutch lever
16	E63-5301	Click button	63	E62-5401	Clutch lever collar
17	E61-7301	Click button washer (A)	64	E62-6701	Clutch cam
18	E61-7401	Click button washer (B)	65	320-7601	Clutch cam retainer
19	E62-4801	Click pawl	66	E62-5501	Clutch cam spring
20	373-1600	Click button washer (C)	67	E63-4301	Right side plate screw
21	320-1402	Click pawl retainer	68	G52-3403	Ball bearing (D)
22	E63-5401	Idle gear	69	E60-8901	Bearing washer (E)
23	375-3005	Idle gear washer	70	E25-3501	Drag spring washer
24	E45-4003	Idle gear screw	71	G58-8601	Click leaf spring holder
25	E62-7202	Left side plate screw	72	F03-2401	Click leaf spring
26	E63-5501	Worm shaft assembly	73	G69-4201	Washer
27	E57-3601	Worm shaft bush	74	E62-3801	Star drag
28	E63-5701	Level wind guard	75	E60-5101	Spacing sleeve
29	E62-9301	Worm shaft washer	76	E63-6601	Handle assembly
30	320-1402	Worm shaft retainer	77	G22-0301	Handle nut
31	E57-3101	Line guide assembly	78	G21-8201	Handle nut screw
32	E57-4001	Line guide pawl	79	E61-0901	Cast control cap
33	F95-0200	Line guide washer	80	B17-5503	Spacer (A)
34	E57-4101	Pawl cap	81	375-7501	Spacer (B)
35	E63-5801	Stabilizer bar (A)	82	E62-4501	Clamp bolt
36	352-0601	Stabilizer bar screw	83	E62-4401	Rod clamp
37	E63-5901	Stabilizer bar (B)	84	E62-6101	Clamp nut
38	F73-3501	Drive shaft washer (A)			
39	G27-9601	Ball bearing (C)			
40	E63-6001	Drive shaft			
41	E62-2601	Drive shaft retainer			
42	G21-2901	Drive shaft retainer screw			
43	E63-6101	Yoke plate			
44	E62-4901	Yoke			
45	E62-2801	Pinion gear			
46	E61-5101	Yoke washer			
47	F93-5201	Yoke spring			

SALTIST LW30HA SPECIAL PARTS		
Key No.	Parts No.	Parts Name
1	E63-7001	Frame assembly
4	E63-7201	Spool assembly
26	E63-7501	Worm shaft assembly
28	E63-7701	Level wind guard
35	E63-7801	Stabilizer bar (A)
37	E63-7901	Stabilizer bar (B)
57	E63-8101	Right side plate