


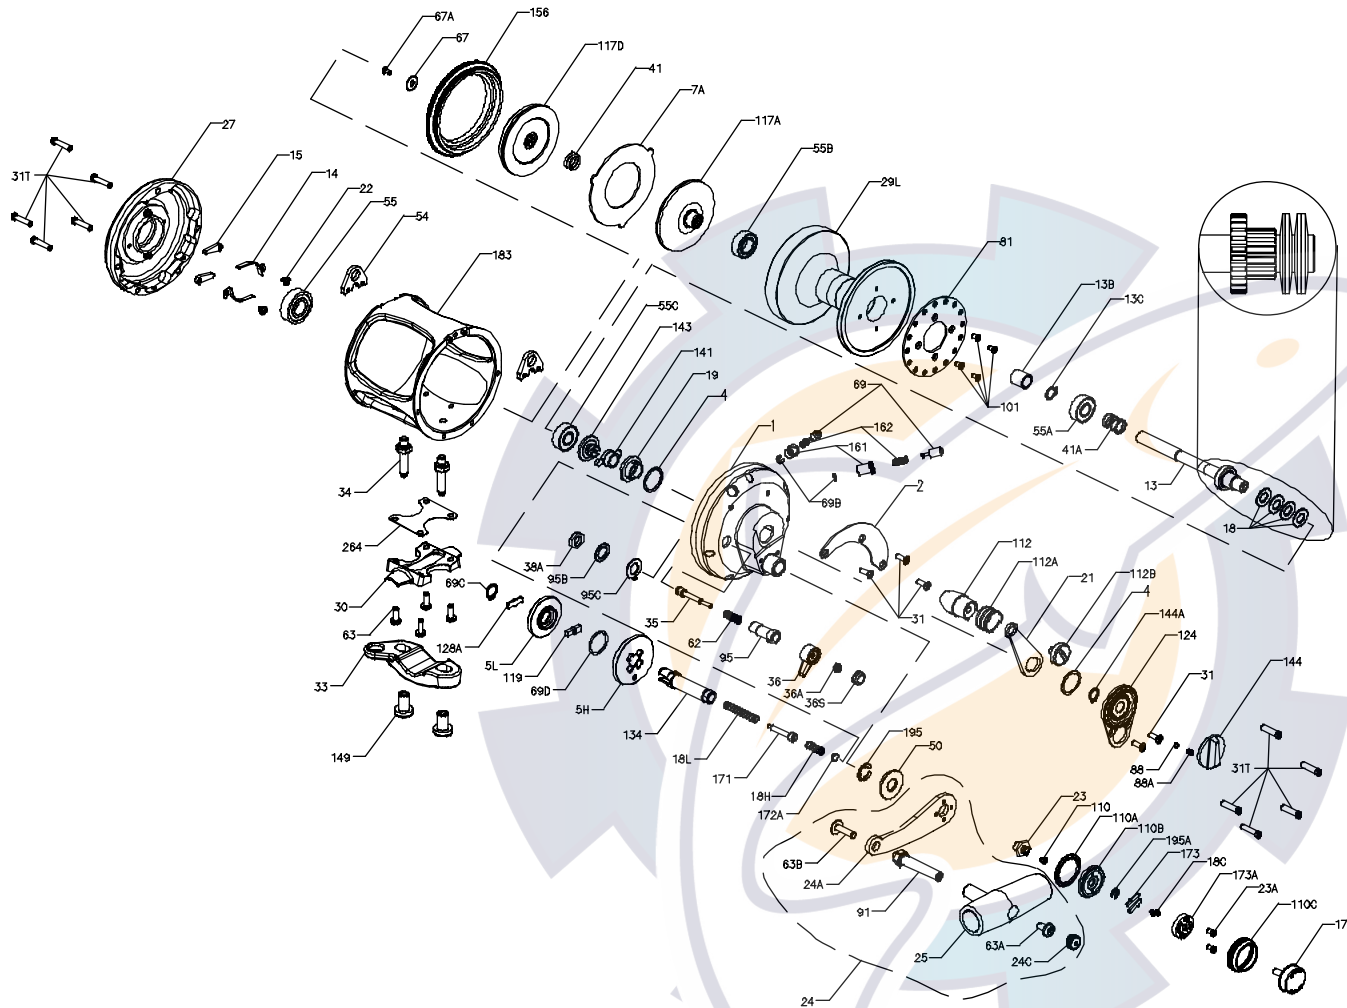

SPECIFICATIONS AND PRE-SETTING OF DRAG

LINE CAPACITY	GEAR RATIO	LINE CLASS	STRIKE SETTING	FULL OR MAX. SETTING
600yds/50 lb.	3.8-1 HIGH	50 lb	12-17 lbs	21-26 lbs
900yds/30 lb.	1.8 LOW	30 lb	8-10 lbs	14-16 lbs
650M/0,70mm	3.8-1 HIGH	24 kg	5,5-8 kg	9,5-12 kg
825M/0,55mm	1.8 LOW	15 kg	3,5-4,5 kg	6-7 kg

**KEY
NO.**

DESCRIPTION

1	Right Side Plate Assembly
2	Quadrant Ring
4	Cam Thrust Washer (2 req.)
5H	Main Gear (High Speed)
5L	Main Gear (Low Speed)
7A	Metal Drag Washer
13	Pinion Gear
13B	Pinion Gear Sleeve
13C	Retaining Ring
14	Dog Spring (2 req.)
15	Dog (2 req.)
18	Disc Clutch Spring (4 req.)
18C	Shift Button Spring (2 req.)
18H	Shift Spring (Heavy)
18L	Shift Spring (Light)

**PART
NO.**

001 030VS
002 030VS
004 012LT
005 030VSHS
005 030VSLs
007A030VS
013 030VSW
013B070
013C030VS
014 050
015 050
018 030
018C015KG
018H015KG
018L030VS

**KEY
NO.**

DESCRIPTION

19	Eccentric Cam
21	Eccentric Lever
22	Dog Spring Screw (2 req.)
23	Screw
23A	Screw (2 req.)
24	Handle Complete
24A	Handle Blank
24C	Handle Knob Cap
25	Knob Assembly
27	Left Side Plate-Assembly
29	Spool
30	Stand
31	Short Screw (5 req.)
31T	Side Plate Screw (10 req.)
33	Rod Clamp

**PART
NO.**

019 030VS
021 030VS
022 109
023 030VS
038 110C
024 030S
024N030S
024C050
025 050
027 030VS
029L030VSW
030 020T
031T070
031T080
033 070

**KEY
NO.**

DESCRIPTION

34	Clamp Screw (2 req.)	034 070
34C	Rod Clamp Screw w/Nut	034C070
35	Click Tongue	035 070
36	Click Button	036 050
36A	Click Button Nut	036 700
36S	Click Button Cap	036S080ST
38A	Click Bushing Nut	038 710
41	Bearing Spring	041 2.5FR
41A	Drag Spring	041 040
50	Shield	050 030VS
54	Harness Lug (2 req.)	054 030T
55	Ball Bearing	055 080
55A	Ball Bearing	020L704
55B	Ball Bearing	055 080ST
55C	Ball Bearing	020L704
62	Click Spring	062 050
63	Stand Screw (4 req.)	063 030T
63A	Screw	063A050
63B	Screw	063 050
67	Pinion Gear Washer	067 070
67A	Plate Screw	067A070
69	Locating Pin (2 req.)	069 050
69A	Retaining Ring	069B030S
69B	Retaining Ring (2 req.)	069B050
69C	Retaining Ring	069C030S
69D	Retaining Ring	069C245
81	Ratchet	081 050
88	Preset Knob Ball	088 070
88A	Preset Knob Spring	018C015KG
91	Handle Rivet	091N050
95	Click Tongue Bushing	095 070
95B	Click Bushing Washer	095A020
95C	Click Bushing Washer	095A050
101	Ratchet Screw (4 req.)	101 030
110	Handle Lock Screw	110 060
110A	Ring	110A030VS
110B	Shift Base	110B030VS
110C	Shift Button Retainer	110C030VS
112	Eccentric Lever Knob	112 070
112A	Knob Sleeve	112A070
112B	Eccentric Knob Screw	112B070
117A	Drive Plate w/Drag Washer	117A050S
117D	Drive Plate w/Drag Washer	117 050S
119	Shift Plate	119 024KG
124	Bridge Cover	124 030VS
128A	Drive Plate	128 024KG
134	Gear Stud	134 030VS
141	Cam Follower	141 030VS
143	Preset Screw	143 030
144	Preset Knob	144 070
144A	Retaining Ring	013C050VS
149	Rod Clamp Nut (2 req.)	149 070
156	Drag Cover	156 030VS
161	Locating Pin Bushing (2 req.)	161 050VS
162	Locating Pin Spring (2 req.)	162 050
171	Shift Plunger	171 030VS
172	Shift Button	172 030VS
172A	Spacer	172A015KG
173	Catch (2 req.)	173 030VS
173A	Catch Holder	173A030VS
183	Tube Frame	183 030VS
195	Retaining Ring	195 040
195A	Shift Assembly Retaining	195 030VS
264	Stand Gasket	264 030T