


OFS4500A, 5500A, 6500A, 7500A, 8500A, 9500A
COMPONENT DIAGRAM

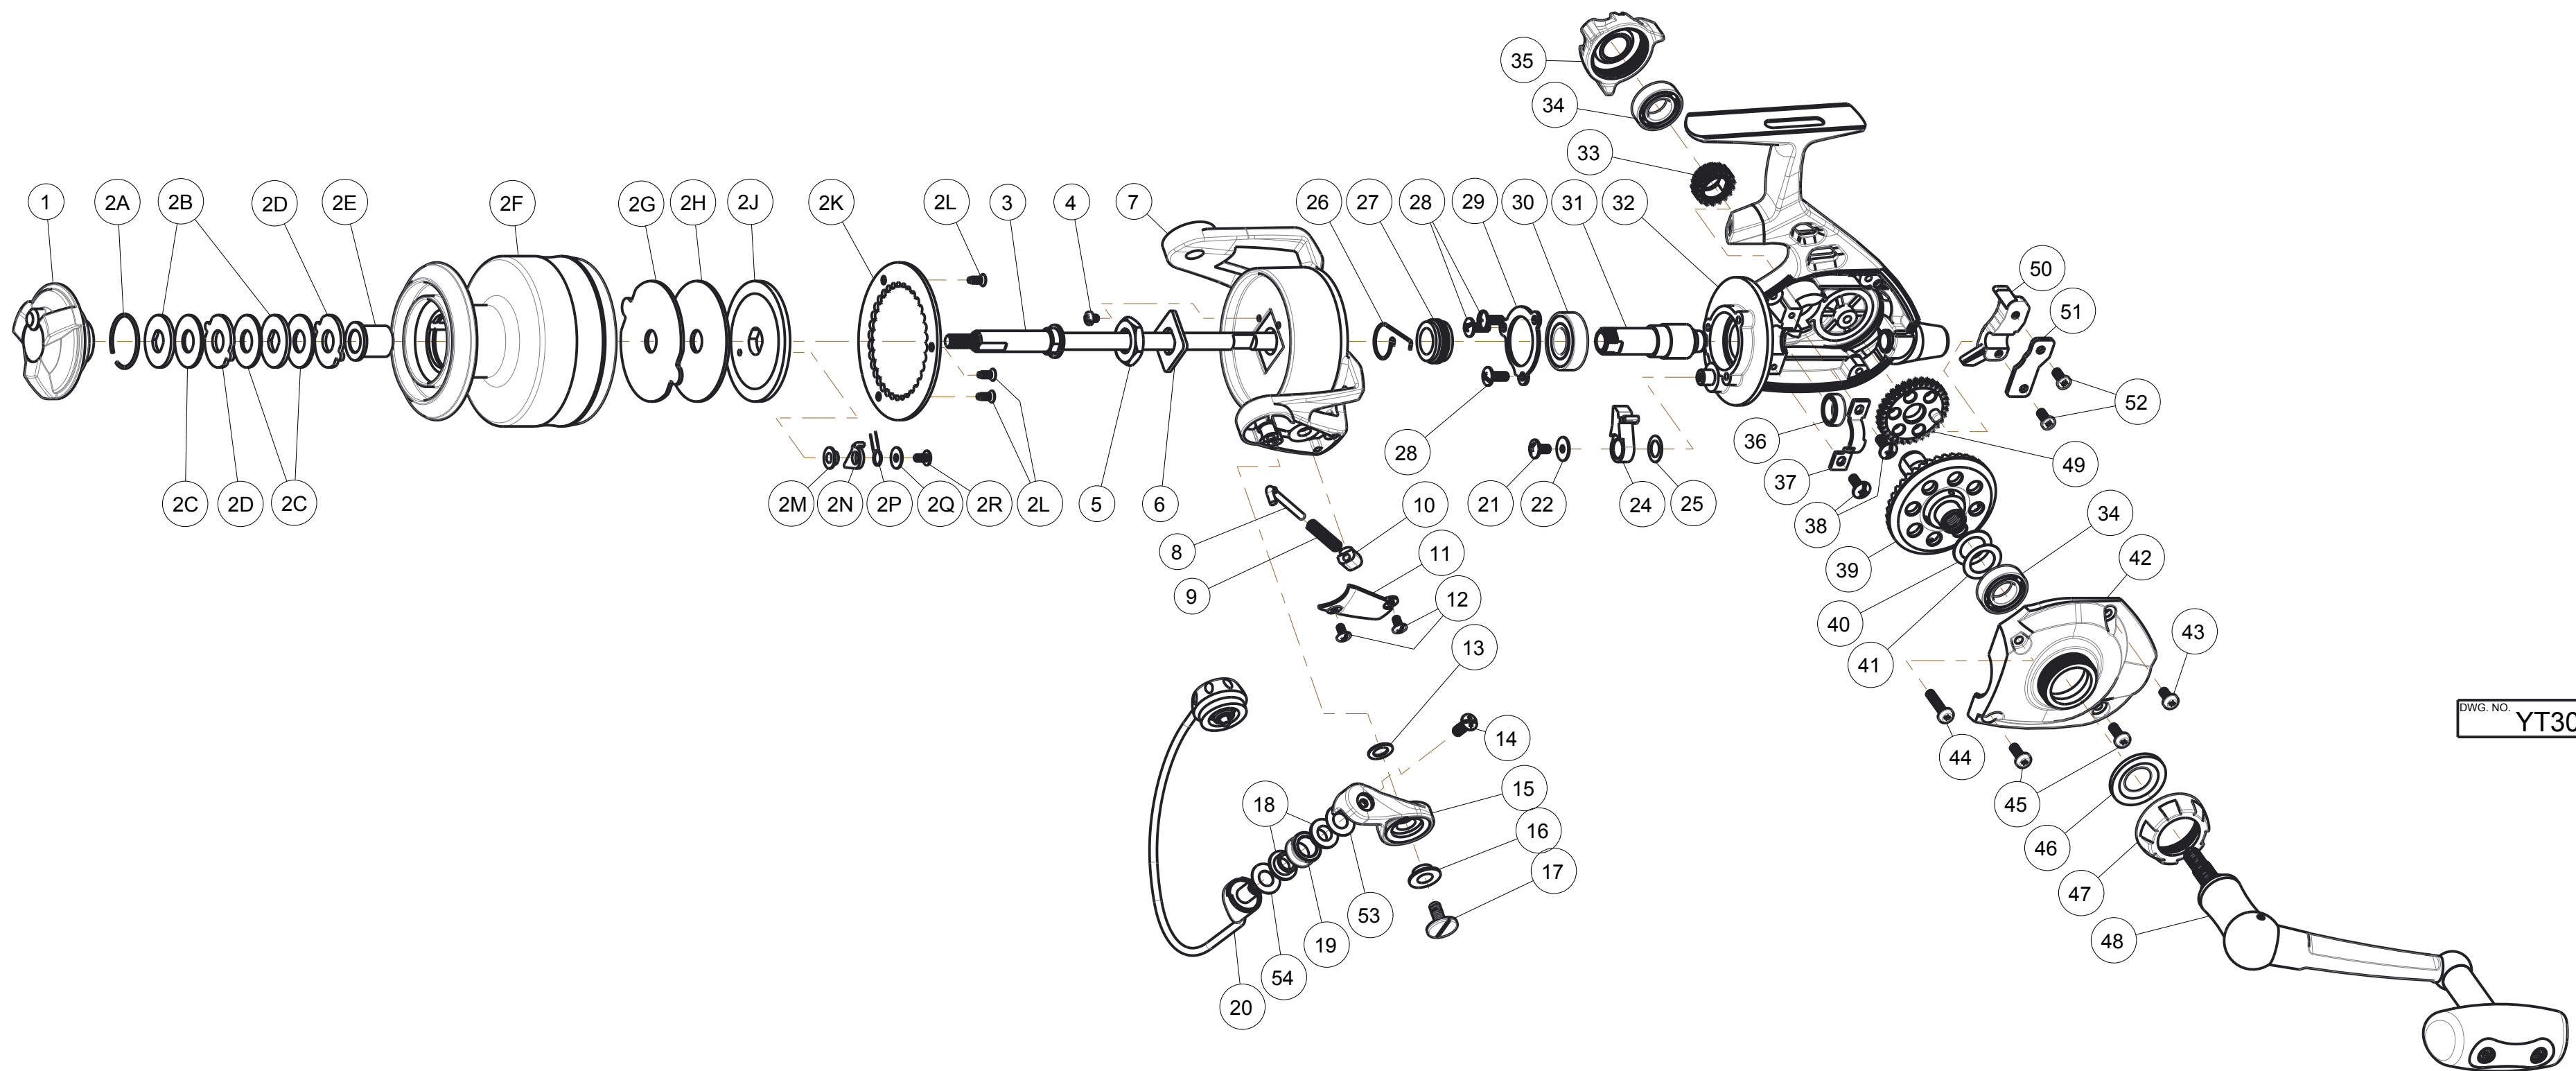

DWG. NO. YT300 EXP REV.

DIMENSIONS AND TOLERANCES PER ISO		TOLERANCES EXCEPT AS NOTED ANGLES TOLERANCE		W.C. BRADLEY /ZEBCO HOLDINGS, INC			
DO NOT SCALE DRAWING		OTHERS PER PROCESS STANDARD ALL DIM. ARE IN MILLIMETERS		P.O. BOX 270 TULSA, OKLAHOMA			
PROPRIETARY NOTICE FOR DOCUMENTS		PART NAME					
This document and the information thereon is the confidential property of ZEBCO Corporation. Reproduction or use of this document or the information hereon for any purpose without the express written consent of ZEBCO Corporation is strictly prohibited.		NOTATION SYMBOLS Flatness Straightness Circularity Cylindricity Surface Profile Line Profile Parallelism Perpendicularity Angularity Total Runout True Position Concentricity Diameter		DWN. BY:		DATE:	
				CKD. BY:		MODEL NAME: YT300-03	
				SCALE: 0.111		SHEET 1 OF 1	
				DRW.No. :		YT300_EXP	

FIN-NOR OFFSHORE SPINING -A

Key No.	DESCRIPTION	Part No.						Q'ty	KEY No.	DESCRIPTION	Part No.						Q'ty
		OFS 4500A	OFS 5500A	OFS 6500A	OFS 7500A	OFS 8500A	OFS 9500A				OFS 4500A	OFS 5500A	OFS 6500A	OFS 7500A	OFS 8500A	OFS 9500A	
1	Drag Knob Assembly	ZT332-01	⇄	HT332-01	⇄	KT332-01	⇄	1	26	Anti Reverse Pawl Spring	YT089-01	⇄	KT089-01	⇄	⇄	⇄	1
2	Spool Assembly	YT321-02	ZT321-02	HT321-02	JT321-02	KT321-02	LT321-02	1	27	Anti Reverse Actuator Spacer	KT091-01	⇄	⇄	⇄	⇄	⇄	1
	2A - Drag Washer Retainer	HT038-01	⇄	⇄	⇄	KT038-01	⇄	1	28	Bearing Retainer Plate Screw	HT123-01	⇄	⇄	⇄	⇄	⇄	3
	2B - Drag "D" Washer	HT080-01	⇄	⇄	⇄	KT080-01	⇄	2	29	Bearing Retainer Plate	YT118-01	⇄	KT118-01	⇄	⇄	⇄	1
	2C - Drag Disc	HT030-02	⇄	⇄	⇄	KT030-02	⇄	3	30	Pinion Bearing	DP058-03	⇄	MF017-01	⇄	⇄	⇄	1
	2D - Drag Key Washer	HT081-01	⇄	⇄	⇄	KT081-01	⇄	2	31	Pinion Gear Assembly	YT311-01	⇄	KT311-01	⇄	⇄	⇄	1
	2E - Spool Bushing	ZT160-01	⇄	HT160-01	⇄	KT160-01	⇄	1	32	Body Assembly	YT301-03	⇄	HT301-04	⇄	KT301-04	⇄	1
	2F - Spool	YT021-02	ZT021-02	HT021-02	JT021-02	KT021-02	LT021-02	1	33	O/S Drive Gear	YT055-01	⇄	KT055-01	⇄	⇄	⇄	1
	2G - Drag Key Washer (Rear)	ZT081-01	⇄	JT081-01	⇄	LT081-01	⇄	1	34	Drive Gear Ball Bearing	CF017-02	⇄	DP058-03	⇄	⇄	⇄	2
	2H - Drag Disc (Rear)	ZT030-02	⇄	JT030-02	⇄	LT030-02	⇄	1	35	Handle Cap	YT073-02	⇄	KT073-02	⇄	⇄	⇄	1
	2J - Drag Washer (Rear)	ZT080-01	⇄	JT080-01	⇄	LT080-01	⇄	1	36	Pinion Gear Ball Bearing - Anchor	KT158-01	⇄	TW058-03	⇄	⇄	⇄	1
	2K - Drag Washer Retainer (Rear)	YT225-01	⇄	HT225-01	⇄	KT225-01	⇄	1	37	Pinion Gear Ball Bearing Retainer - Anchor	YT040-01	⇄	KT040-01	⇄	⇄	⇄	1
	2L - Drag Washer Retainer Screw	KT228-01	⇄	⇄	⇄	⇄	⇄	3	38	Bearing Retainer Screw	HT123-01	⇄	⇄	⇄	⇄	⇄	2
	2M - Spool Clicker Bushing	HT224-01	⇄	⇄	⇄	⇄	⇄	1	39	Drive Gear Assembly	YT312-01	⇄	LT312-01	⇄	⇄	⇄	1
	2N - Spool Clicker	HT103-01	⇄	⇄	⇄	⇄	⇄	1	40	Drive Gear Washer	N/A	N/A	DF035-03	⇄	⇄	⇄	1
	2P - Spool Clicker Spring	HT068-01	⇄	⇄	⇄	⇄	⇄	1	41	Drive Gear Adjust Washer	DF035-02	⇄	⇄	⇄	⇄	⇄	1
	2Q - Spool Clicker Washer	KT076-01	⇄	⇄	⇄	⇄	⇄	1	42	Body Cover	YT023-01	⇄	KT023-01	⇄	⇄	⇄	1
	2R - Spool Clicker Screw	KT085-01	⇄	⇄	⇄	⇄	⇄	1	43	Body Cover Screw "C"	YT057-03	⇄	KT057-01	⇄	⇄	⇄	1
3	Spool Shaft Assembly	YT315-01	⇄	HT315-01	⇄	KT315-01	⇄	1	44	Body Cover Screw "B"	YT057-01	⇄	KT057-01	⇄	⇄	⇄	1
4	Rotor Nut Screw	KT113-01	⇄	⇄	⇄	⇄	⇄	1	45	Body Cover Screw "A"	YT057-02	⇄	KT057-01	⇄	⇄	⇄	2
5	Rotor Nut	KT006-01	⇄	⇄	⇄	⇄	⇄	1	46	Seal - Crank Handle	YT139-01	⇄	KT139-01	⇄	⇄	⇄	1
6	Rotor Washer	KT065-01	⇄	⇄	⇄	⇄	⇄	1	47	Handle Collar	YT226-01	⇄	KT226-01	⇄	⇄	⇄	1
7	Rotor	YT009-02	⇄	HT009-02	⇄	KT009-02	⇄	1	48	Handle Assembly	HT318-02	⇄	KT318-02	⇄	⇄	⇄	1
8	Arm Lever Spring Shaft	YT031-01	⇄	KT031-01	⇄	⇄	⇄	1	49	O/S Gear Assembly	HT353-01	⇄	LT353-01	⇄	⇄	⇄	1
9	Arm Lever Spring	YT044-01	⇄	KT044-01	⇄	⇄	⇄	1	50	O/S Slider	HT025-01	⇄	LT025-01	⇄	⇄	⇄	1
10	Arm Lever Spring Holder	KT020-01	⇄	⇄	⇄	⇄	⇄	1	51	O/S Slider Retainer	HT078-01	⇄	LT078-01	⇄	⇄	⇄	1
11	Arm Lever Cover	YT087-01	⇄	KT087-01	⇄	⇄	⇄	1	52	O/S Slider Retainer Screw	YT111-01	⇄	KT111-02	⇄	⇄	⇄	2
12	Arm Lever Cover Screw	KT085-01	⇄	⇄	⇄	⇄	⇄	2	53	Line Roller Washer "A"	KT203-01	⇄	⇄	⇄	⇄	⇄	1
13	Arm Lever Washer	KT229-01	⇄	⇄	⇄	⇄	⇄	1	54	Line Roller Washer "B"	KT203-02	⇄	⇄	⇄	⇄	⇄	1
14	Line Slider Screw	KT106-01	⇄	⇄	⇄	⇄	⇄	1									
15	Arm Lever	YT007-01	⇄	KT007-01	⇄	⇄	⇄	1		Line Roller Washer Kit	KT4203-01	⇄	⇄	⇄	⇄	⇄	1
16	Arm Lever Bushing	KT227-01	⇄	⇄	⇄	⇄	⇄	1		53 - Line Roller Washer "A"	KT203-01	⇄	⇄	⇄	⇄	⇄	1
17	Arm Lever Screw	KT051-01	⇄	⇄	⇄	⇄	⇄	1		54 - Line Roller Washer "B"	KT203-02	⇄	⇄	⇄	⇄	⇄	1
18	Line Roller Bushing	KT202-01	⇄	⇄	⇄	⇄	⇄	2									
19	Line Roller	KT004-02	⇄	⇄	⇄	⇄	⇄	1		Drag Washer Kit	YT4080-01	⇄	HT4080-01	⇄	KT4080-0	⇄	1
20	Bail Assembly	YT347-01	⇄	HT347-01	⇄	KT347-01	⇄	1		2B - Drag "D" Washer	HT080-01	⇄	⇄	⇄	KT080-01	⇄	2
21	Anti Reverse Pawl Screw	YT085-01	⇄	⇄	⇄	⇄	⇄	1		2C - Drag Disc	HT030-02	⇄	⇄	⇄	KT030-02	⇄	3
22	Anti Reverse Pawl Washer - Top	KT099-01	⇄	⇄	⇄	⇄	⇄	1		2D - Drag Key Washer	HT081-01	⇄	⇄	⇄	KT081-01	⇄	2
24	Anti Reverse Pawl	YT063-01	⇄	KT063-01	⇄	⇄	⇄	1		2H - Drag Disc (Rear)	ZT030-02	⇄	JT030-02	⇄	LT030-02	⇄	1
25	Anti Reverse Pawl Washer - Bottom	KT100-01	⇄	⇄	⇄	⇄	⇄	1									

B OFS4055A and 5500A change back Sintered Gear
C Add 53 and 54 - follow the production
D update
E #2J correct part number to LT080-01 was LT081-01

F1105

5/24/2016
5/27/2016
6/6/2016
3/22/2017