


OFS65

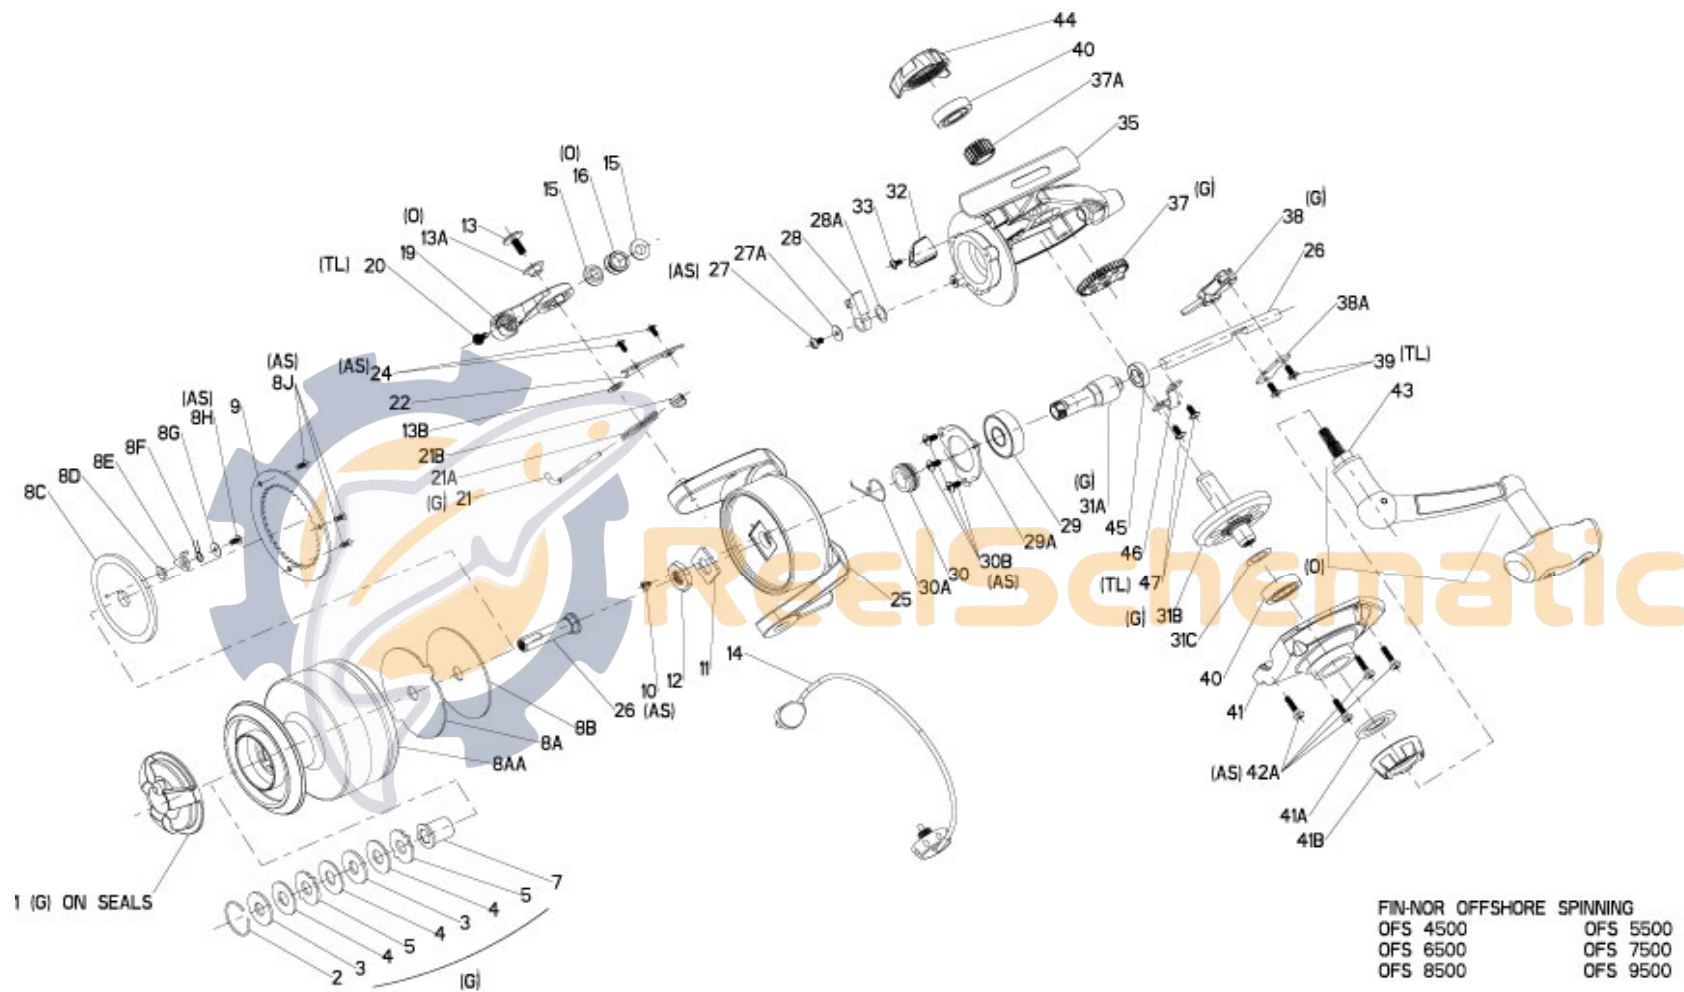

FIN-NOR OFFSHORE SPINNING
OFS 4500 OFS 5500
OFS 6500 OFS 7500
OFS 8500 OFS 9500

(O) : OIL - HOT SAUCE
(G) : GREASE - HOT SAUCE
(AS) : ANTI-SEIZE (on screw threads)
(TL) : THREAD LOCKING COMPOUND (on screw threads)

OFS65

KEY #	DESCRIPTION	OFS65	KEY #	DESCRIPTION	OFS65
1	DRAG KNOB ASSEMBLY	HT332-01	21	SPRING SHAFT	KT031-01
2	RETAINER, SPOOL, TOP	HT038-01	21A	BAIL ARM SPRING	KT044-01
3	DRAG WASHER, KEYED - SHAFT	HT080-01	21B	SPRING HOLDER	KT020-01
4	DRAG FRICTION WASHER	HT030-01	22	ROTOR COVER	KT087-01
5	DRAG WASHER, KEYED - SPOOL	HT081-01	24	SCREW - ROTOR COVER	KT085-01
7	SPOOL SLEEVE	HT160-01	25	ROTOR	HT009-01
8	SPOOL - ASSEMBLY KIT (includes):	HT4321-01	26	CENTER SHAFT ASSY.	KT315-01
	2 - RETAINER, SPOOL, TOP	HT038-01	27	SCREW - ANTI - REVERSE PAWL	YT111-01
	3 - DRAG WASHER, KEYED - SHAFT	HT080-01	27A	ANTI - REVERSE PAWL RETAINER	KT099-01
	4 - DRAG FRICTION WASHER	HT030-01	28	ANTI - REVERSE PAWL	KT063-01
	5 - DRAG WASHER, KEYED - SPOOL	HT081-01	28A	WASHER - ANTI - REVERSE	HT098-01
	7 - SPOOL SLEEVE	HT160-01	29	PINION BEARING	KT028-01
	8AA - SPOOL	N/A	29A	RETAINER PLATE	KT118-01
	8A - DRAG WASHER, KEYED SPOOL - REAR	HT081-02	30	ANTI - REVERSE SPRING SPACER	KT091-01
	8B - DRAG FRICTION WASHER	HT080-02	30A	ANTI - REVERSE ACTUATOR SPRING	KT089-01
	8C - DRAG, WASHER, KEYED - SHAFT REAR	HT039-01	30B	SCREW - RETAINER PLATE (3)	HT123-01
	8D - BUSHING - CLICKER	HT224-01	31	GEAR KIT (includes):	KT4011-01
	8E - SPOOL CLICKER	HT103-01		31A - PINION	KT011-01
	8F - CLICK SPRING	HT068-01		31B - CRANK GEAR ASSEMBLY	KT312-01
	8G - CLICKER WASHER	KT076-01		31C - DRIVE GEAR ADJUST WASHER	GU105-37
	8H - SCREW - CLICKER	KT085-01	32	BAIL TRIP	KT019-01
	8J - SCREW - RETAINER - DRAG (REAR)	KT228-01	33	SCREW - BAIL TRIP	KT085-01
	9 - SPOOL RETAINER - BOTTOM	HT225-01	35	BODY ASSEMBLY	HT301-01
8A	DRAG WASHER, KEYED SPOOL - REAR	HT081-02	37	O/S GEAR	KT053-01
8B	DRAG FRICTION WASHER	HT080-02	37A	SPUR GEAR	KT055-01
8C	DRAG, WASHER, KEYED - SHAFT REAR	HT039-01	38	O/S SLIDER	KT025-01
8D	BUSHING - CLICKER	HT224-01	38A	O/S SLIDER RETAINER	KT078-01
8E	SPOOL CLICKER	HT103-01	39	MAIN SHAFT SCREW (2)	KT111-01
8F	CLICK SPRING	HT068-01	40	BALL BEARING	KT157-01
8G	CLICKER WASHER	KT076-01	41	BODY COVER	KT023-01
8H	SCREW - CLICKER	KT085-01	41A	SEAL CRANK HANDLE	KT139-01
8J	SCREW - RETAINER - DRAG (REAR)	KT228-01	41B	COLLAR - CRANK	KT226-01
9	SPOOL RETAINER - BOTTOM	HT225-01	42	BODY COVER SCREW KIT (includes):	KT4057-01
10	SCREW - ROTOR NUT LOCK	HT094-01		42A - SCREW - BODY COVER	KT057-01
11	ROTOR WASHER	KT065-01	43	CRANK HANDLE ASSEMBLY	HT318-01
12	ROTOR NUT	KT006-01	44	BEARING CAP	KT073-01
13	SCREW - BAIL ARM	KT051-01	45	PINION BEARING	KT141-01
13A	BUSHING - BAIL ARM	KT227-01	46	BEARING RETAINER	KT040-01
13B	WASHER - BAIL ARM	KT229-01	47	SCREW - RETAINER (2)	HT123-01
14	BAIL ASSEMBLY	HT347-01	48	DRAG WASHER KIT (includes):	HT4080-01
15	BUSHING - LINE ROLLER	KT202-01		3 - DRAG WASHER, KEYED - SHAFT	HT080-01
16	LINE ROLLER	KT004-02		4 - DRAG FRICTION WASHER	HT030-01
19	BAIL ARM	KT007-01		5 - DRAG WASHER, KEYED - SPOOL	HT081-01
20	SCREW - LINE SLIDER	KT106-01		8B - DRAG FRICTION WASHER	HT080-02